NEXE(SYS Deep Tissue Massage Gun



USER MANUAL

NOTE: Please read all instructions carefully before using this product.

BEFORE YOU BEGIN

Thank you for selecting the Nexersys Deep Tissue Massage Gun. For your safety and benefit, read this manual carefully before use.

PRECAUTIONS

This exercise equipment is built for optimum safety. However, certain precautions apply. Be sure to read the entire manual before you assemble or operate your Deep Tissue Massage Gun. In particular, note the following safety precautions:

Keep children and pets away from the equipment at all times. DO NOT leave children unattended in the same room with the equipment.

If you experience pain or discomfort, STOP use at once.

This product is intended for home use only and is not suitable for commercial use.

Inspect prior to each use. Do not use a Deep Tissue Massage Gun with worn or damaged parts.

Do not attempt to repair the Deep Tissue Massage Gun. This will void the warranty.

Before and after using the Deep Tissue Massage Gun, always drink water to hydrate.

Never operate the Deep Tissue Massage Gun if it is not functioning properly.

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH ISSUES. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. XFIT, INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.

SAVE THESE INSTRUCTIONS.

INFORMATION



Deep Tissue Massage Gun



SPECIFICATIONS

Dimensions: 9.5 x 6.875 x 2.5in Vibration Frequency: Level 1 - 30Hz, Level 2 - 40Hz, Level 3 - v53Hz Weight: 2.5 lbs 11.1kg Charge: 110-240V 50/60Hz -SA-26VDC-1A

INSTRUCTIONS

CHARGING

- 1. Fully charge the battery for up to six hours before first use.
- 2. To charge, connect the DC end of the supplied 24V adapter to the battery's charging port (on the bottom) and plug AC side cable into wall outlet.
- 3. LED light on charging block will turn red to indicate active charging.
- 4. Full charge is indicated when the LED light turns back to green.
- 5. The number on the right side of the circular screen shows the battery level as a percentage. It is not recommended to fully deplete the battery.
- 6. The average run-time is 2+ hours depending on speed level and pressure applied during use.

OPERATION

- 1. With unit off, fully insert the applicator of your choice by pressing in firmly. Remove by pulling it out.
- 2. Power device on by moving the power switch on the bottom of the battery to the ON position. Power device off by moving the power switch to the OFF position.
- 3. With power switch in ON position, press the red power button on the circular screen once to activate the vibrations.
- 4. Use the plus (+) and minus (-) buttons to adjust the vibration speed to your preference. 1 is the lowest speed, 30 is the highest speed.
- 5. Pressing the power button again will turn the device off. The blue LED lights will indicate the corresponding power level.
- 6. Massage desired body part (soft tissue only) at the desired speed applying pressure as needed.

MAINTENANCE, CLEANING & STORAGE

- Use a slightly damp towel to clean device and dry with a soft cloth.
- For storage or travel, store in supplied carton box.

DISCLAIMER

WARNINGS

- Do not immerse in water.
- Keep away from liquids or heat sources.
- Keep ventilation ports free from dust and debris.
- Do not remove screws or attempt to disassemble.
- Do not operate continuously for more than one hour.
- Allow device to rest for 30 minutes before using again.
- Unplug the charger from device battery after charging or prior to use.
- For adult use only.
- Do not use if injured.
- Consult your doctor before using this product.

SAFETY INSTRUCTIONS

- · For adult use only.
- Use only on a dry, clean surface of the body over clothing by lightly pressing and moving across the body for approximately 60 seconds per region.
- Use the Deep Tissue Massage Gun only on the body's soft tissue as desired without producing pain or discomfort. Do not use on head or any hard or bony area of the body.
- Use only the applicators that provide the best desired effect.
- Bruising can occur regardless of control setting or pressure applied. Check treated areas frequently and immediately stop at first sign of pain or discomfort.
- Keep fingers, hair or any other body part away from the shaft and backside of the applicator as pinching may occur.
- Do not place any objects into the ventilation holes of the Deep Tissue Massage Gun.
- Do not immerse in water or allow water to enter the ventilation holes of the Deep Tissue Massage Gun.
- Do not drop or misuse the Deep Tissue Massage Gun.
- Only recharge with supplied 26 VDC Deep Tissue Massage Gun charger.
- · Carefully examine device and battery before each use.
- Do not tamper or alter Deep Tissue Massage Gun in any way.
- Never leave the Deep Tissue Massage Gun operating or charging unattended.

LIMITED WARRANTY

Who is Covered

This Warranty is valid for the original purchaser and is not transferable or applicable to any other person(s).

What is Covered

XFit, Inc. warrants that the Deep Tissue Massage Gun is free from defects in materials and workmanship, when used for the purpose intended, under normal conditions, and provided it receives proper care and maintenance as described in the Product's Assembly and Owner's Manual. This Warranty is good only for authentic, original, legitimate products manufactured by XFit, Inc. and sold through an authorized agent.

Terms

1 year

How XFit, Inc. Will Support the Warranty

Throughout and as set forth under the terms of the Warranty, XFit, Inc. will provide a replacement for any component or part that proves to be defective in materials or workmanship. XFit, Inc. reserves the right to substitute material of equal or better quality if identical materials are not available under this warranty.

In the event that replacement parts or components do not correct the issue, XFit, Inc. reserves the right to replace the product or apply a limited credit reimbursement toward another XFit, Inc. brand product, at our discretion. Reasonable substitution may be required depending upon Product availability. Any replacement of the Product under the terms of the Warranty in no way extends the original Warranty period. THESE REMEDIES ARE THE EXCLUSIVE AND SOLE REMEDIES FOR ANY BREACH OF WARRANTY.

Owner's Responsibility

- Retain appropriate and acceptable Proof of Purchase.
- Operate, maintain, and inspect the product as specified in this User Manual.
- Product must be used exclusively for consumer use. Commercial use of this Deep Tissue Massage Gun will void the Warranty.
- Notify XFit, Inc. within 30 days after detecting an issue with the product and request a return authorization. If a return authorization is issued, you must return the defective part to XFit, Inc. for inspection.
- Install replacement parts or components in accordance with any Nexersys instructions.
- Perform diagnostic procedures with a trained XFit, Inc. representative if requested.

What is Not Covered

Damage due to abuse, tampering or modification of the Product, failure to properly follow assembly instructions, maintenance instructions, or safety warnings as stated in the User Manual, rust or corrosion as a result of the Product's physical location, misuse, mishandling, accident, natural disasters.

LIMITED WARRANTY

Exclusions

The preceding Warranties are the sole and exclusive express Warranties made by XFit, Inc. They supersede any prior, contrary or additional representations, whether oral or written. No agent, representative, dealer, person or employee has the authority to alter or increase the obligations or limitations of this Warranty. Any implied Warranties, including the WARRANTY OF MERCHANTABILITY and any WARRAN-TY OF FITNESS FOR A PARTICULAR PURPOSE, are limited in direction to the term of the applicable express Warranty provided above, whichever is longer. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you.

Limitation of Remedies

EXCEPT AS OTHERWISE REQUIRED BY APPLICABLE LAW, THE PURCHASER'S EXCLUSIVE REMEDY IS LIMITED TO REPAIR OR REPLACEMENT OF ANY COMPONENT DEEMED BY XFIT, INC. TO BE DEFEC-TIVE UNDER THE TERMS AND CONDITIONS STATED HEREIN. IN NO EVENT WILL XFIT, INC. BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, INDIRECT OR ECONOMIC DAMAGES, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING, WITHOUT LIMITATION, PRODUCT LIABILITY, NEGLIGENCE OR OTHER TORT) OR FOR ANY LOST REVENUE, PROFIT, DATA, PRIVACY OR FOR ANY PUNITIVE DAM-AGES ARISING OUT OF OR RELATED TO THE USE OF THE ADJUSTABLE DUMBBELLS EVEN IF XFIT, INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS EXCLUSION AND LIMITA-TION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL OR INCIDENTAL TYPE DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

State Laws

This Warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

Expirations

If the Warranty has expired, XFit, Inc. may assist with replacements or repairs to parts and labor, but there will be a charge for these services. Contact Nexersys for information on post-warranty parts and services. XFit, Inc. does not guarantee availability of spare parts after expiration of warranty period.

International Purchases

If you purchased a Deep Tissue Massage Gun outside of the United States consult your local distributor or dealer for Warranty Support.

Contact support@nexersys.com for Warranty Support

nexersys

For Service: www.nexersys.com/connect

Technical/Customer: E-mail: support@nexersys.com

> XFit, Inc. 7500 Rialto Blvd Bldg 1, Suite 122 Austin, TX 78735 USA

Website: www.nexersys.com Videos: youtube.com/c/nexersys

Made in China